


## CORNER GUARD AND TOP CAP INSTALLATION INSTRUCTIONS

Outside corner guards are the only trim piece accessory needed to install P3TEC.

Please read all instructions before installing corner guards.

Material must be stored, installed and used in environmentally controlled conditions.

- 1) Prior to installation:
  - a. Allow corner guards to reach room temperature before installing.
  - b. Cut corner guards to desired length before installing.
  - c. When applying corner guards to P3TEC wall surfaces, be sure that the surface is dry and free of dirt, dust, oil, loose paint, wax, grease, and more.
- 2) Use PL Pro Line Premium Construction Adhesive, by Loctite, to adhere corner guards. Apply a bead of PL Pro Line in a zig-zag pattern over the back of the corner guard. See Figure 1a. Immediately position corner guard on the wall and apply pressure until a tight fit is achieved. An extension roller will aid this step. Additional bracing may be required during installation to insure complete contact with the wall. See Figure 1b.

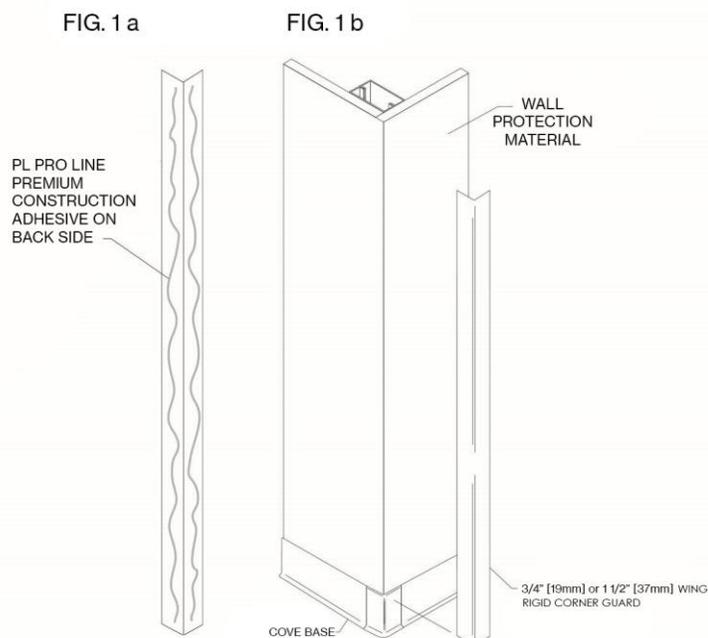


# Top-Cap Trim

## Installation Instructions


### Recommended Tools




TOP-CAP  
TRIM

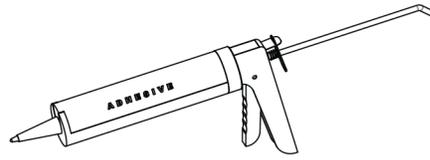

585C-Clear Caulk

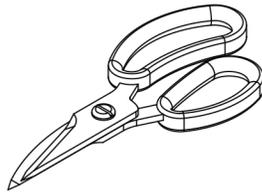

Scissors/Shears

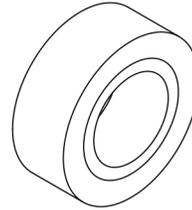

Blue Painters Tape

### Trim Piece Install Steps

1. For trim that needs to be cut, use a chop saw if available, otherwise a pair of scissors or shears.
2. Ensure that all dust and debris is cleared from the top edge of **P3TEC**.
3. Using 585C-Clear Caulk, run a bead about 1/8" thick along the top edge of the **P3TEC**, matching the length of the trim being installed.
4. Slowly roll and press trim piece onto the edge of the **P3TEC**, matching the bottom ledge of the trim piece to the top edge of the **P3TEC**. **SEE FIG. 1**

NOTE: For inside corners, butt up trim pieces together (**SEE FIG. 2**). For outside corners, stop short of recommended corner guard (**SEE FIG. 3A**), but allow corner height to match height of installed **P3TEC** trim (**SEE FIG. 3B**).

# Top-Cap Trim


## Installation Instructions

5. Once the trim piece has been secured to the top edge of the **P3TEC**, apply strips of blue painters tape on to the trim piece to hold in place. A 3" long piece of blue painters tape secured perpendicular to trim every 4' and seams will suffice.

6. After the trim piece has been secured in place, used a damp sponge/rag to clean up any adhesive leaking from trim edge.

NOTE: It is recommended to allow the trim piece to set for a minimum of 24 hours, to ensure adhesion.

Figure 1.

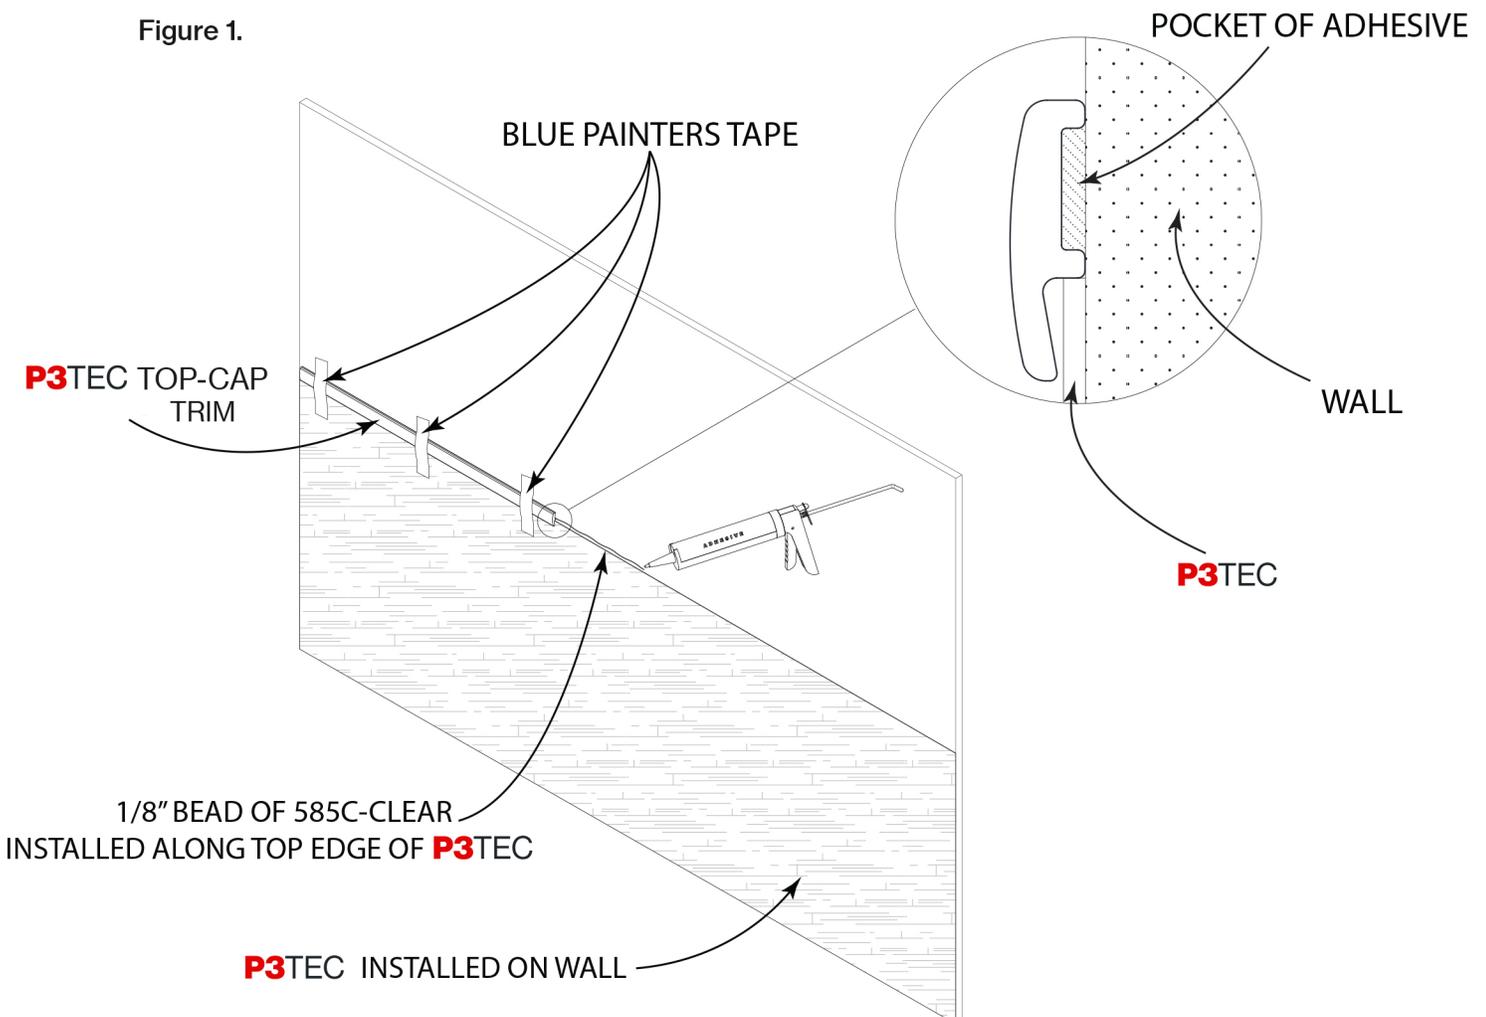

# Top-Cap Trim

## Installation Instructions

