

CORNER GUARD INSTALLATION INSTRUCTIONS

Outside corner guards are the only trim piece accessory that you need to install P3TEC.

Please read all instructions before installing corner guards.

Material must be stored, installed and used in environmentally controlled conditions.

1. Prior to installation:

- a. Allow corner guards to reach room temperature before installing.
- b. Cut corner guards to desired length before installing.
- c. When applying corner guards to P3TEC wall surfaces, be sure that the surface is dry and free of dirt, dust, oil, loose paint, wax, grease, and more.

2. Use PL Pro Line Premium Construction Adhesive, by Loctite, to adhere corner guards.

Apply a bead of PL Pro Line in a zig-zag pattern over the back of the corner guard. **See Figure 1a.** Immediately position corner guard on the wall and apply pressure until a tight fit is achieved. An extension roller will aid this step. Additional bracing may be required during installation to insure complete contract with the wall. **See Figure 1b.**

Figure 1a


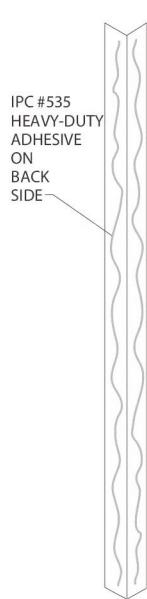


Figure 1b

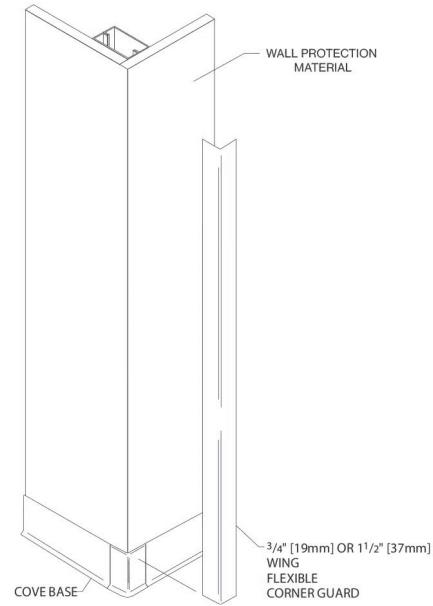

Contact your distributor, or p3tecwall.com